



# FUTURO II



**Instrukcja montażowa**



Assembly instruction

Bauanleitung





Інструкція монтажу

## PARTS AND TOOLS LIST


NO	Name	Qty
1	Legs	2
2	Feet	2
3	M6*14 Screw	8
4	Bracket	2
5	Adaptor Holder	1
6	Handset	1
7	Adaptor	1
8	Support Beam	1
9	4mm Hex Spanner	1
10	M6*10 Screw	4
11	M6*12 Screw	12
12	M6*16 Screw	4
13	Rubber Cushion	10
14	ST3.5*19 Screw	7
15	ST4.8*19 Screw	10
16	Cable Clip	5
17	Power Cable	1

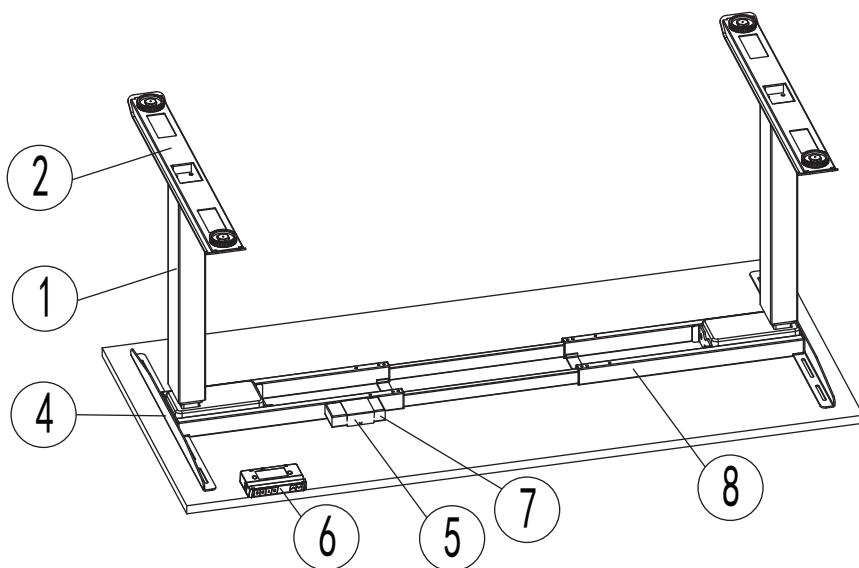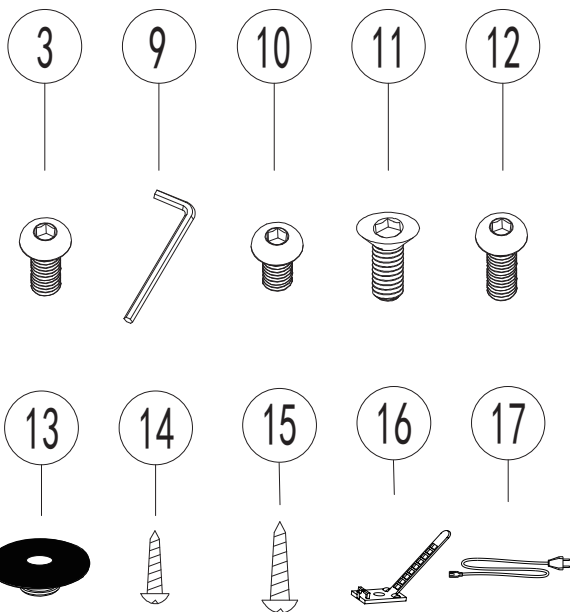


## STEP 1

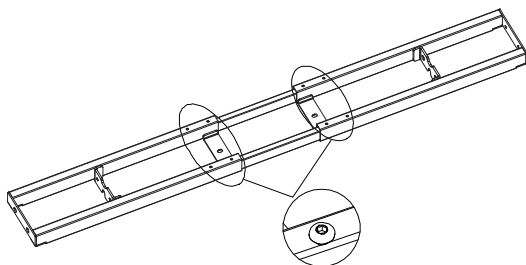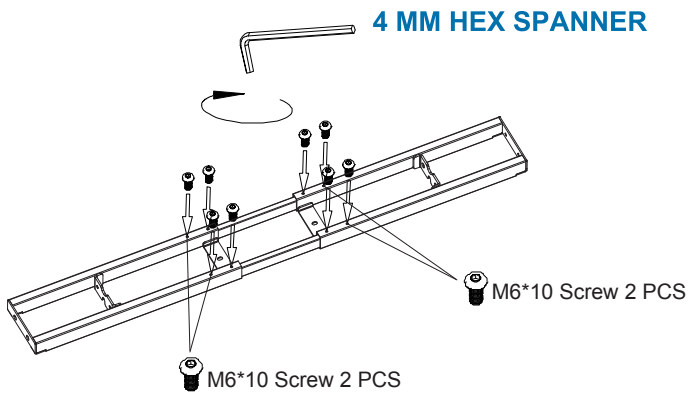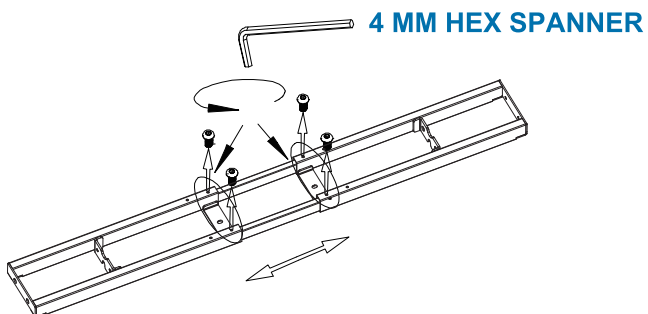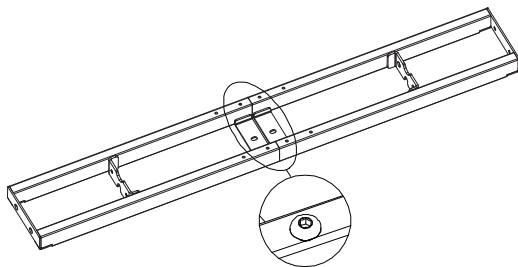


## STEP 2

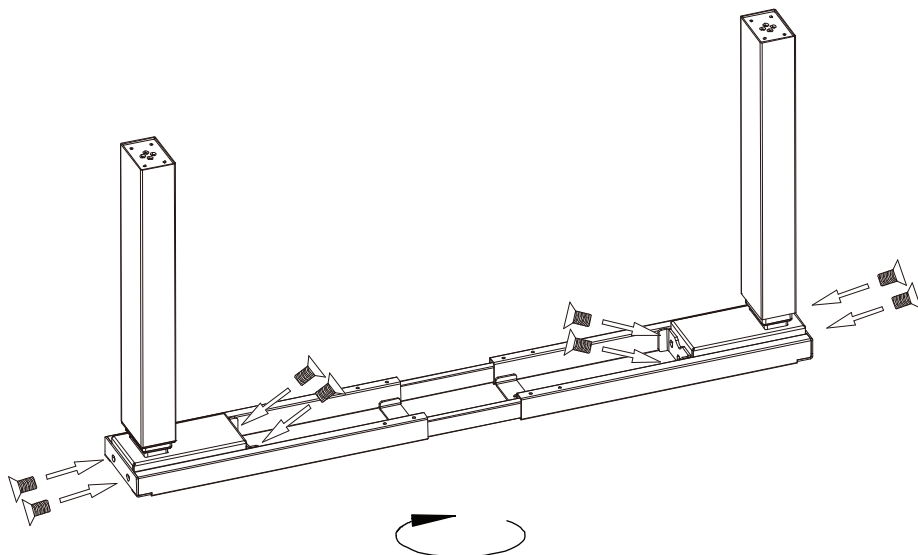


M6\*12 SCREW 8PCS

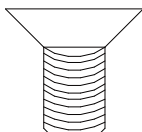


4MM HEX SPANNER

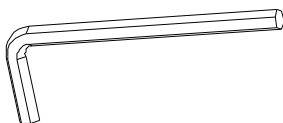


## STEP 3

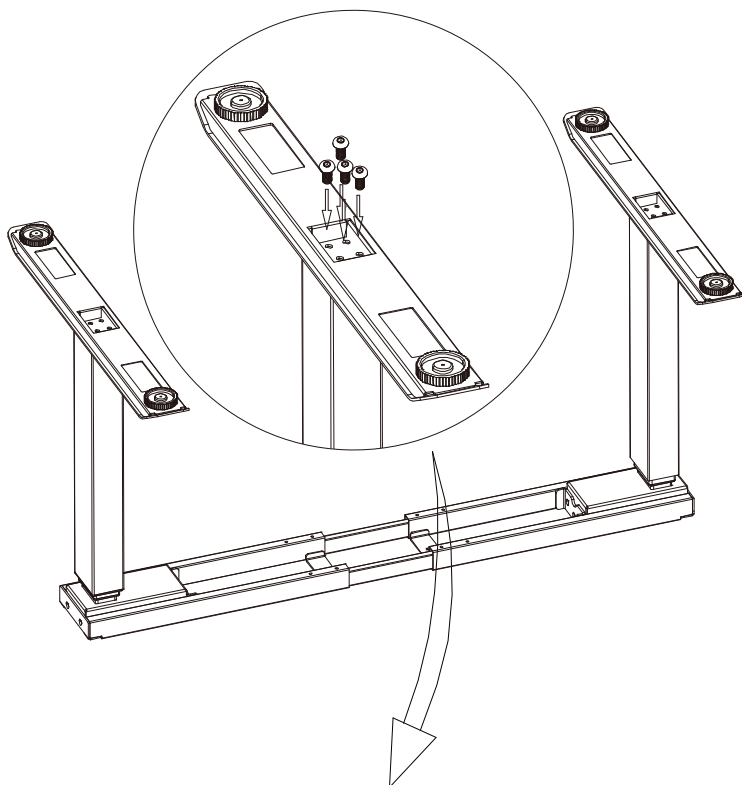


**M6\*14 SCREW 8PCS**

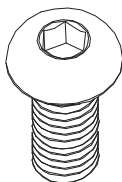

**4MM HEX SPANNER**

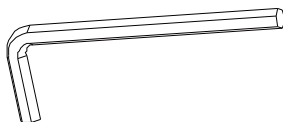


## STEP 4

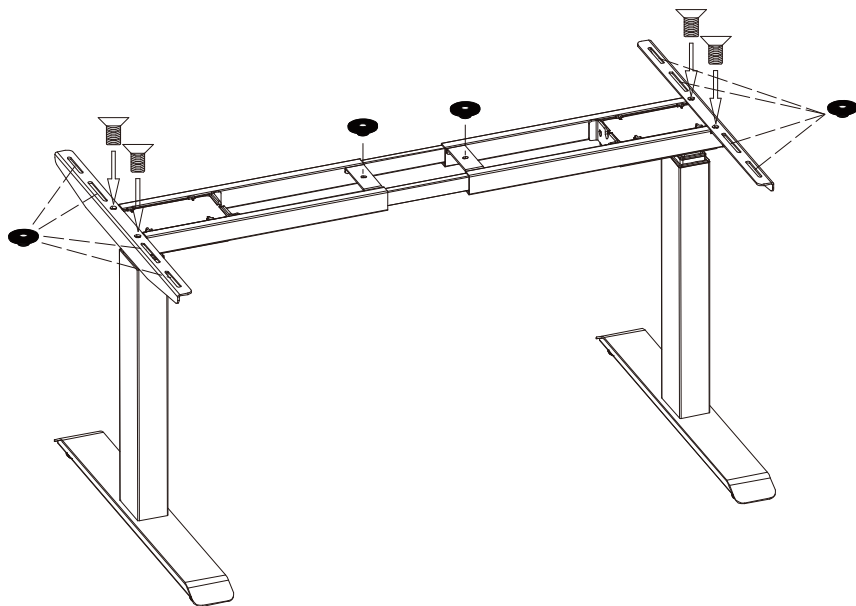

RUBBER CUSHION 10PCS




M6\*12 SCREW 4PCS

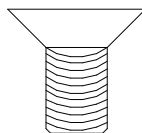

4MM HEX SPANNER



## STEP 5

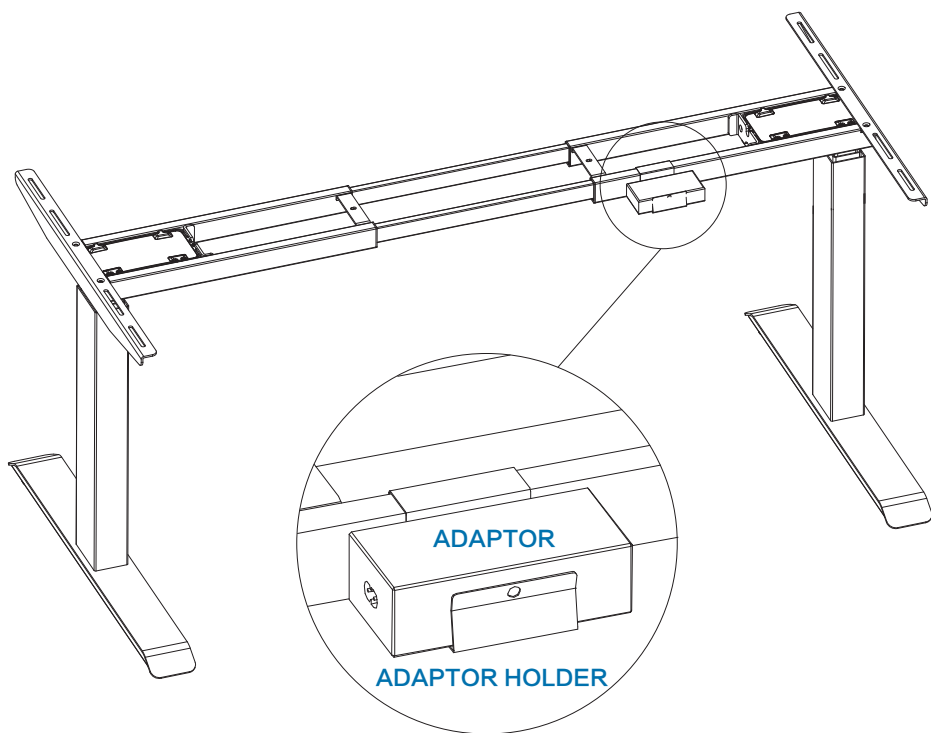


M6\*16 SCREW 2PCS+ST4.8\*19 SCREW 2PCS  
OR

ST4.8\*19 SCREW 4PCS


ST4.8\*19 SCREW 4PCS

OR

M6\*16 SCREW 2PCS+ST4.8\*19 SCREW 2PCS

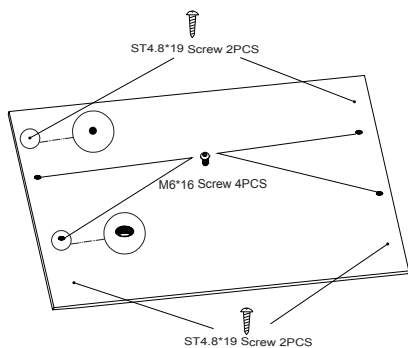

or

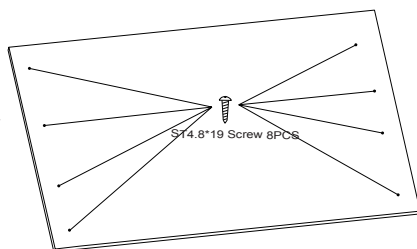

PL: Nie należy używać ST4.8\*19 śrub do blatu, która jest cieńsza 20 mm



EN: Do not use ST4.8\*19 screws for a table top that is thinner than 20 mm

DE: Verwenden Sie keine Schrauben ST4.8\*19 für eine Tischplatte, die dünner ist als 20 mm

RU: Не используйте ST4.8\*19 винтов для столешницы, которая тоньше 20 мм



## STEP 7

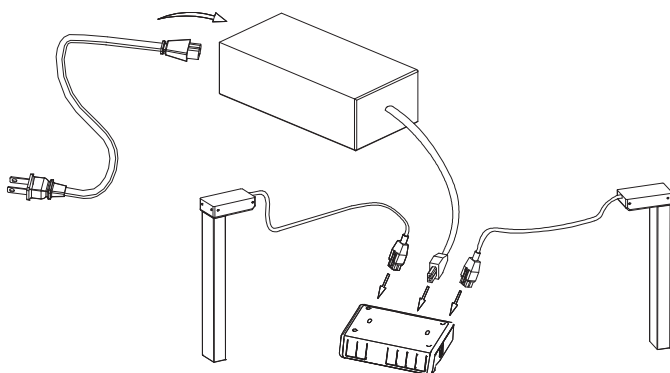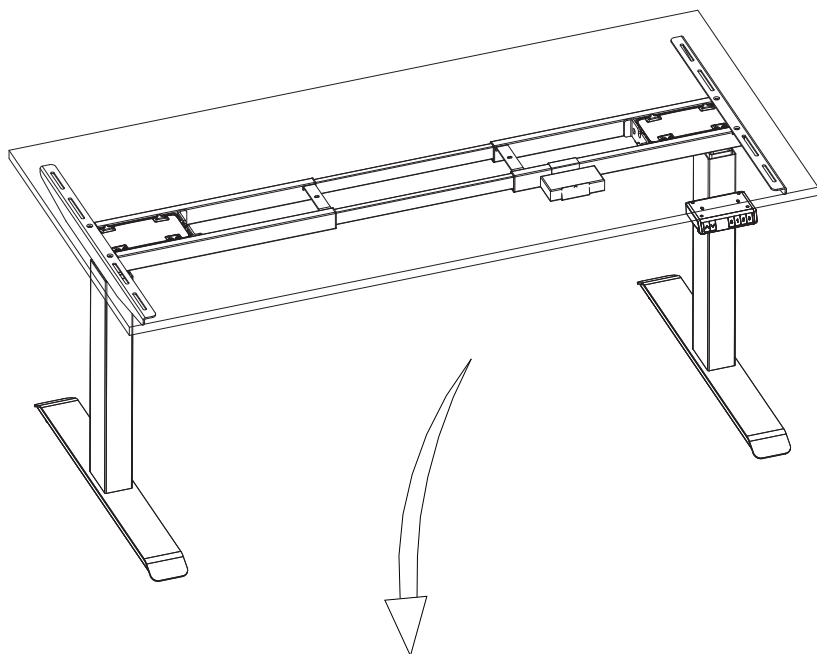

ST3.5\*19 SCREW 5PCS



CABLE CLIP

